


- **Operating frequency:** 433 MHz
- **Remote control range:** approximately 30 m in an open area and approximately 10 m in environments with partitions

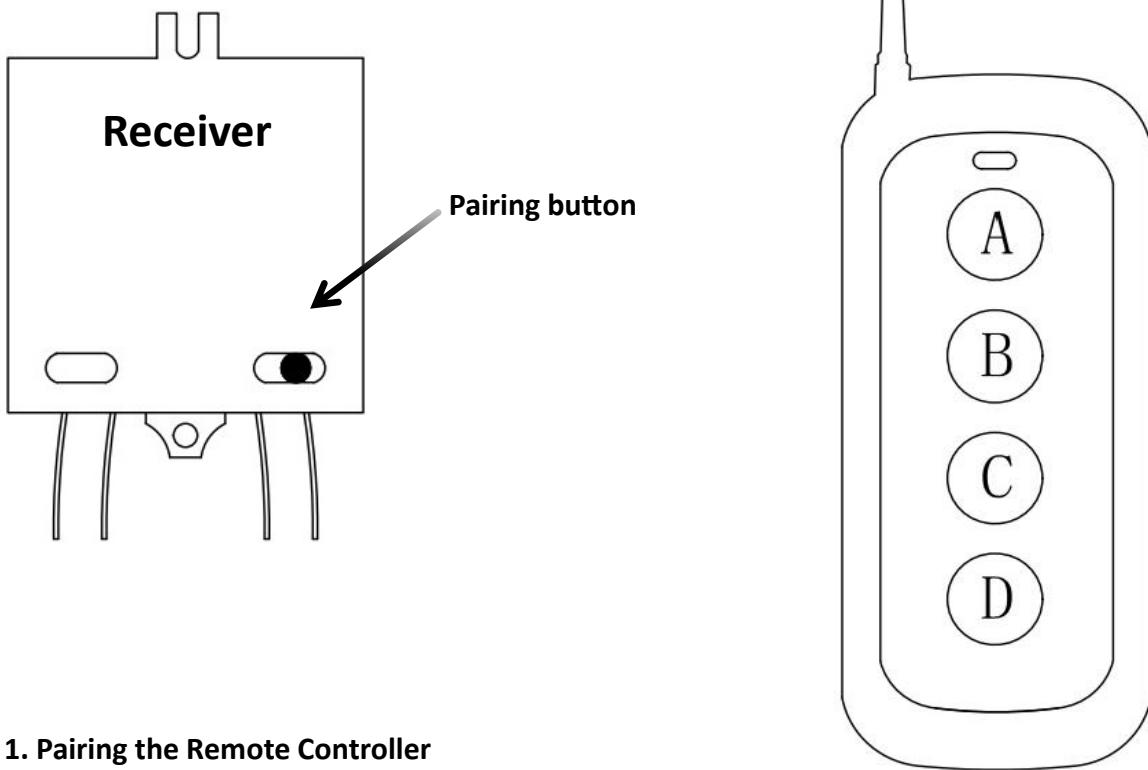

### 1. Pairing the Remote Controller

- Switch on the light.
- Press the code pairing button on the receiver.
- Immediately press one of the A, B, C, or D buttons on the remote controller.
- If the indicator on the receiver flashes once, press the same button on the remote controller again.

The pairing process is now successfully completed.

### 2. Clearing the Pairing (Code Deletion)

- Switch off the light and wait until the indicator on the receiver turns off.
- Switch the power on again, then press and hold the button on the receiver for 5 seconds.
- When the indicator flashes three times, the code has been successfully cleared.

All previously paired remote controllers will be removed from the receiver's memory.

### 3. Using the Remote Controller

- Open the battery compartment of the remote controller and insert a 12 V (23A) battery.  
Make sure to observe the correct polarity (+ / -).
- Use the A / B / C / D buttons to switch the corresponding device on or off.
- When the battery voltage is low, replace the battery in time to ensure proper operation of the remote controller.